



*This product is sold  
and supported  
in the USA by*




**LASER LAB SOURCE**  
marketplace for **Scientists & Engineers**

**contact@LaserLabSource.com**

---

**800.877.5065**

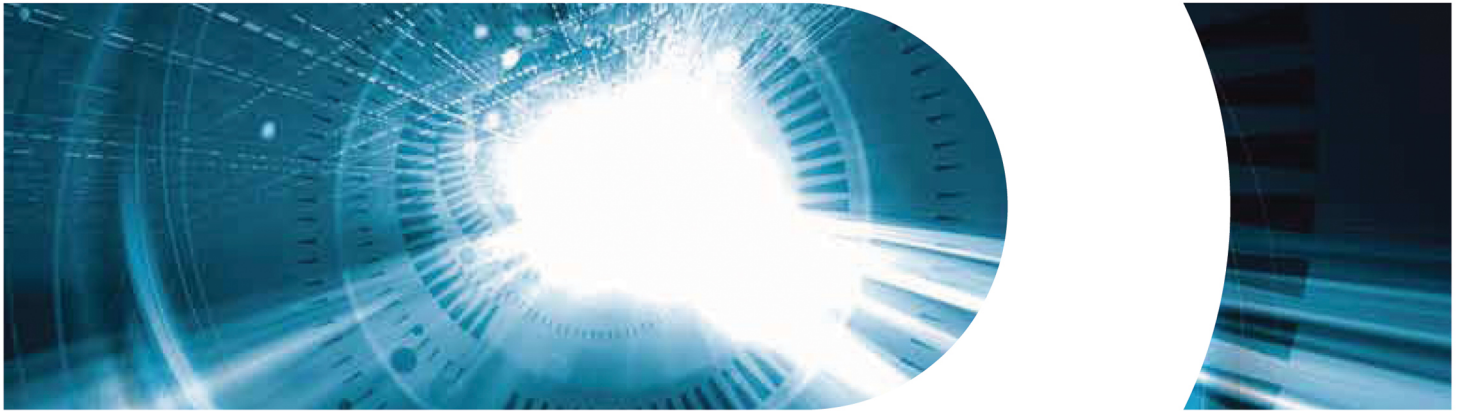

## APPLICATION NOTE

---

### **Handling, Mounting, Testing and Operating Cooled 14-pin Butterfly Laser Pumps: 1064CHP / 1999CHP, HPM & PLM / 2000CHP /1943 & 1945 RAM**


---

#### **Description**

---

3SPGroup 1064CHP / 1999CHP / 1999HPM / 1999PLM / 2000CHP high power laser pump modules are supplied in a cooled 14-pin butterfly package with back facet monitor photodiode. 1943 & 1945 RAM are supplied in versions with or without back facet monitoring photodiodes.

In order to get the maximum performance from the pump module for its targeted life time mission, handling and testing recommendations as well as the mounting procedure have to be followed closely.

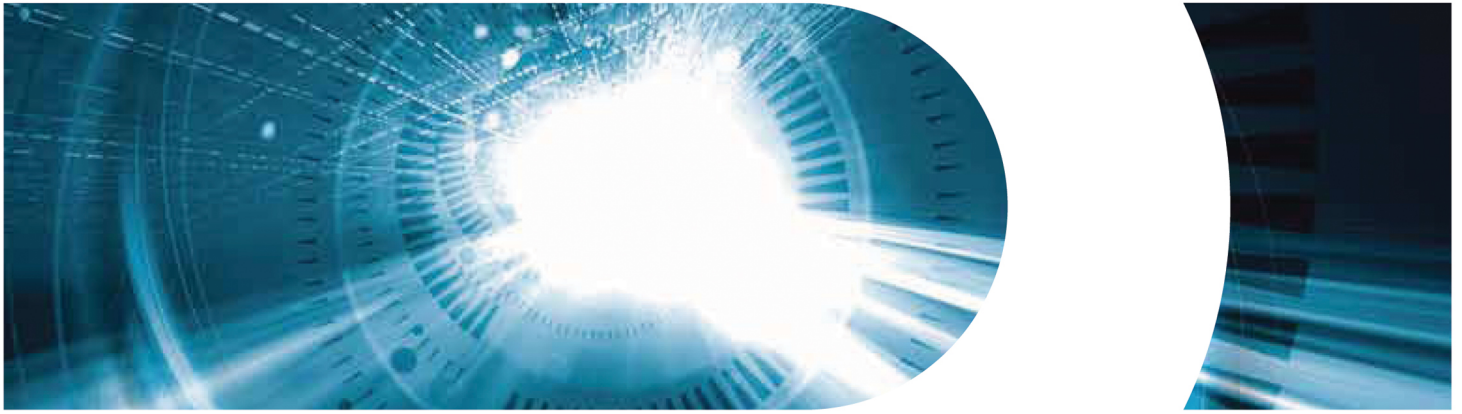

## Handling recommendations

---

### Prevention against ESD damage

This product is sensitive to electrostatic discharge (ESD) and should not be handled except at a static free workstation.

Take the following precautions to prevent the module against ESD which is the primary cause of unexpected laser diode failure:

- The user must be connected to the ground and use anti-static gloves.
- Use wrist straps in direct contact with skin.
- Use grounded work surfaces and semi-conductive anti-static table material.
- The user's feet must touch the floor.

### Unpacking the pump module

The following recommendations must be used for taking out the module from its packing:

- Handle the laser by its package only.
- Never hold the laser neither by the leads (risk of degradation of ceramics parts in the package) nor by the pigtail.
- The module ferrule (rigid tube used to protect the pigtail at the exiting side of the package) is fragile. Do not handle the module by this part.
- Never pinch the fiber pigtail or apply an instantaneous traction on it which could generate micro-cracks in fiber silica.


## Mounting procedure

---


### Assembling the module on its board

In order to achieve the best performance in term of optical output power and a long term stable operation of the pump module, it is highly recommended to fulfil the following mounting procedure:

- Avoid any shock on the package ferrule (snout).
- Do not apply any mechanical force on the package ferrule.
- Do not apply any liquid (flux, solvent) or grease on the ferrule.
- Use a large enough heat sink holder with a surface flatness better than 30  $\mu\text{m}$  and a roughness better than 1  $\mu\text{m}$ .

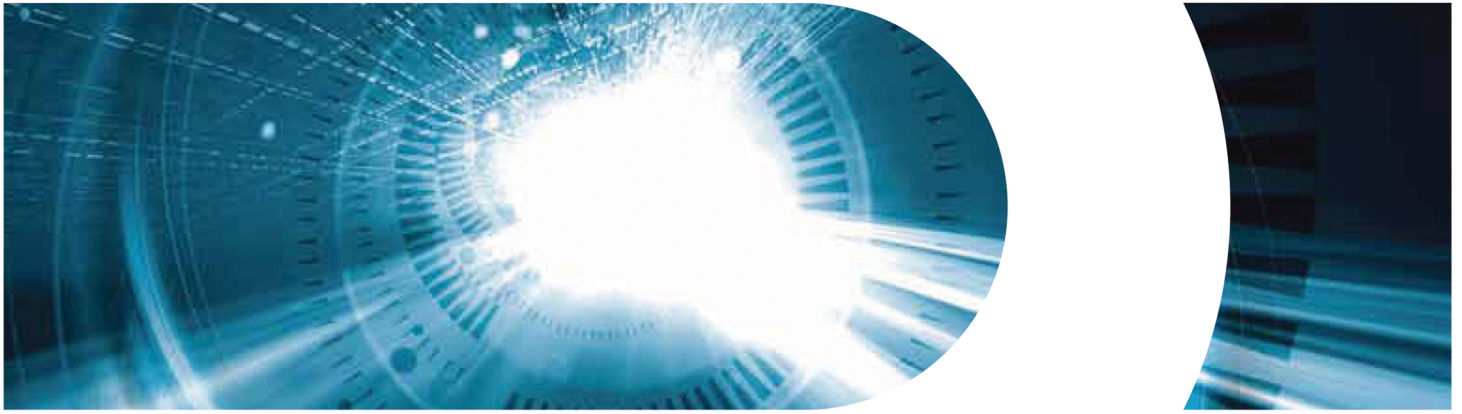

- Carefully clean both mechanical holder (or heat sink) and bottom package surfaces to prevent any spurious particles or dust.
- Place the pump package on the heat sink holder and fix it first by slightly tightening the 4 screws (C M2 x 4 min, Re 350N/mm<sup>2</sup>).
- Tighten the 4 screws following the star sequence shown below (1-2-3-4) with a maximum mounting torque of 150 mN.m.

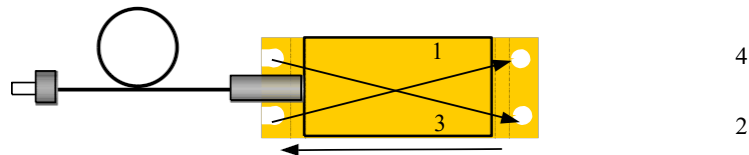


- Avoid any mechanical compression applied on the module package, including its package ferrule.
- Do not coil the fiber pigtail up with permanent strength or twist.
- Avoid any micro-bends or local compression on the polarization maintaining fiber.
- When soldering the package leads to the PCB board, do not use a soldering temperature higher than 350 °C during a maximum soldering time of 5 s at 3.0 mm distance from the leads tip.

## Unassembling and re-packing the module

In case of module return to 3SPGroup factory, it is recommended to un-assemble and to re-pack the pump module according to the following conditions:

- Use a dedicated tool for unsoldering the leads.
- Use a specific tool for extracting the module body from the PCB board, avoiding any mechanical stress on the package ferrule and on the fiber pigtail.
- For re-packing the module, use as much as possible the original packing or a similar one.
- Carefully place the module on its location.
- Carefully coil the fiber pigtail in the box, avoiding any stress or strength on it and mainly on the FBG section.
- Make sure the pin out is long enough to allow measurements
- Make sure the fiber is coming with the FBG (no fiber cutting)
- Make sure the pin out is long enough to allow measurements
- Place short cuts on pin out if possible

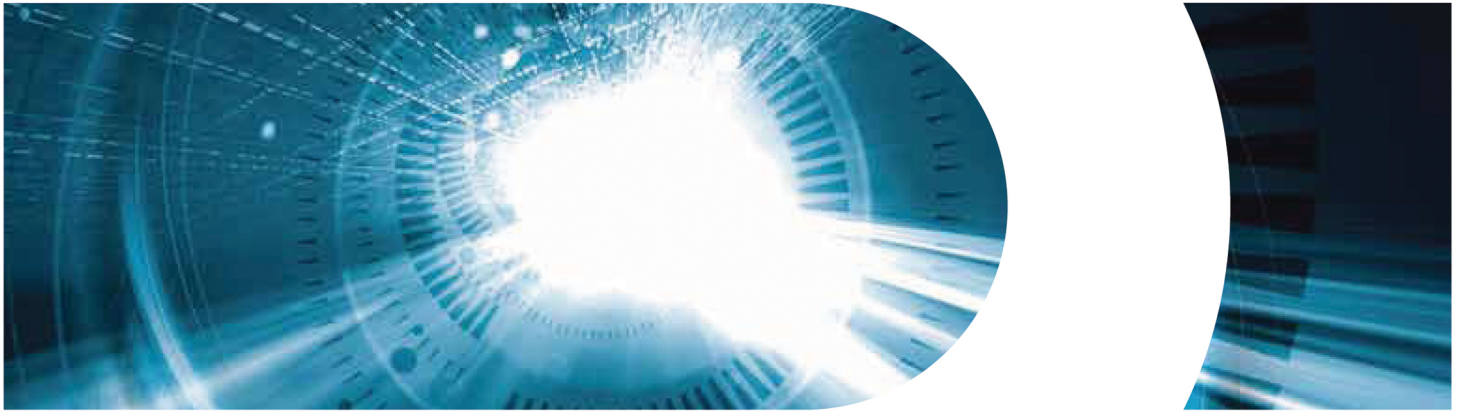

## Testing and operating recommendations

---

### Operating the pump module on its board


3SPGroup's pump modules are designed and built for CW (Continuous Wave) operation. All other operating modes are not guaranteed for a statistically meaningful lifetime. Specifically, all the following restrictions must be respected to avoid any damage to the device:

- Care should be taken to avoid any electrical power supply transient and voltage overload.
- In any case, respect the absolute maximum ratings given in the absolute maximum rating table in the specification document.
- Never connect the device to already polarized leads.
- Always use controlled current ramps to adjust the injection level to the set-point.
- Current ramps towards the desired operating values must not exceed the following values:
  - positive current ramp: 200 mA/s
  - negative current ramp: 500 mA/s
- When using fast current ramps, carefully check that:
  - Overshoots do not exceed 5 % of the current set point or the absolute maximum ratings and that stabilization occurs within 3 s.
  - No negative current or bias undershoot is recorded when switching-off the device.
- No ON-OFF operation is allowed! ON-OFF operation is defined as any repeated switching ON and OFF of the device on a timescale that allows thermal stabilization of some or all parts of the pump module ( $> 1 \mu\text{s}$ ).
- For pulsed operation on fast timescales ( $< 1 \mu\text{s}$ ,  $\text{DC} < 5 \%$ ), please contact your sales representative at 3SPGroup.
- For any other operating mode that might be needed by your application, please contact your 3SPGroup sales representative for more details.

### Power Supply and TEC Controller

Before utilizing a laser diode (LD) module power supply, one should refer to the specified Absolute Maximum Ratings in the data sheet of each series of high power laser modules. Electrical Overstress (EOS) damage occurs when a pump module is subjected to voltage or current levels beyond the maximum ratings.

Our recommendations for preventing EOS of pump module are:

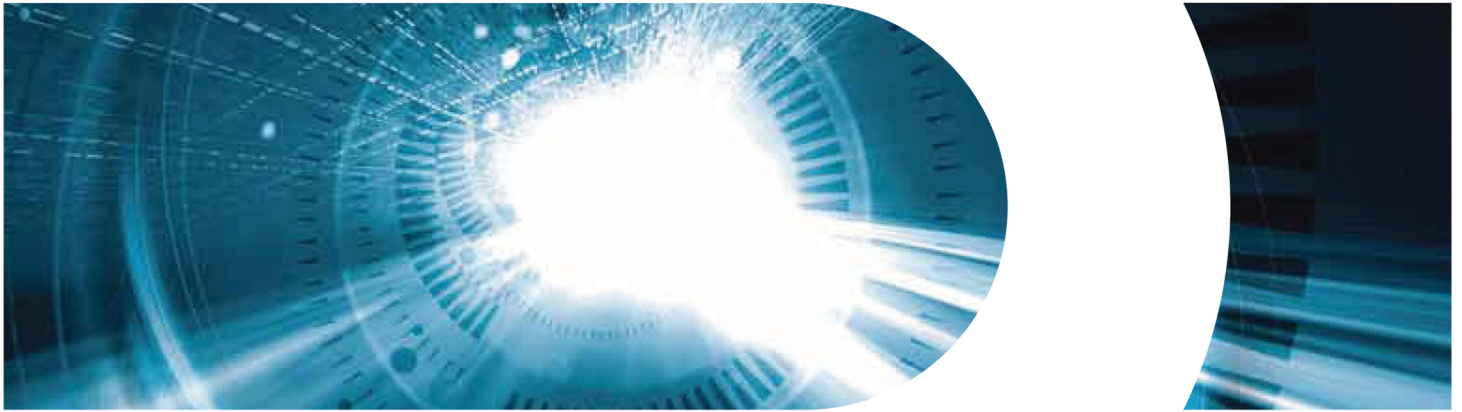

- Confirm pump module is mounted with the specified electrical pin-out.
- Transient electrical stress to the pump module should be avoided or minimized through operational life. The maximum specified transient current value and time for a pump module should never be exceeded while operating the laser diode. Please refer to the Absolute Maximum Ratings specified within the pump module specifications.
- Use transient suppression for power supplies.
- Use over voltage protection for power supplies and fuses.
- Ensure that all operational and assembly equipment is properly grounded with no loose connections, which can lead to intermittent connections.
- Ensure that the TEC controller is enabled and that the pump module is actively cooled prior to turning on the laser diode controller. Allow the internal temperature of the pump module to stabilize at  $25 \pm 2$  °C before turning on the LD.

## TEC control and operation

Large capacity Thermoelectric Coolers (TECs) are used to control cooled pump module temperature for high power operation. Proper operational procedures for the TEC are critical for reliable pump module performance during its lifetime. Pump module TECs typically are operated with closed-loop temperature controllers/power supply circuits.


Closed-loop circuits allow maintaining internal temperature of the pump module at 25 °C for varying ambient temperatures. The TEC can be switched from a cooling mode to a heating mode by reversing the direction of current flow.

The TEC operates from a DC power source. An important criterion for reliable high power pump module operation is to use a filtered

DC current. DC ripple affects the TEC performance and, as consequently subsequent pump module performance and lifetime.

The TEC power supply should be limited to the absolute maximum TEC current as specified for each model of pump module. The TEC can run at the absolute maximum TEC current only for a very limited duration without impacting module reliability. Pump module TECs operate with closed-loop temperature controller/power supply circuits. A thermistor is used to control the LD temperature within the pump module to 25 °C through the specified operational ambient temperature range.

When the pump module is first turned on, there will be a transient current supplied to the TEC as it stabilizes via the feedback circuit. It is also important to note that the absolute

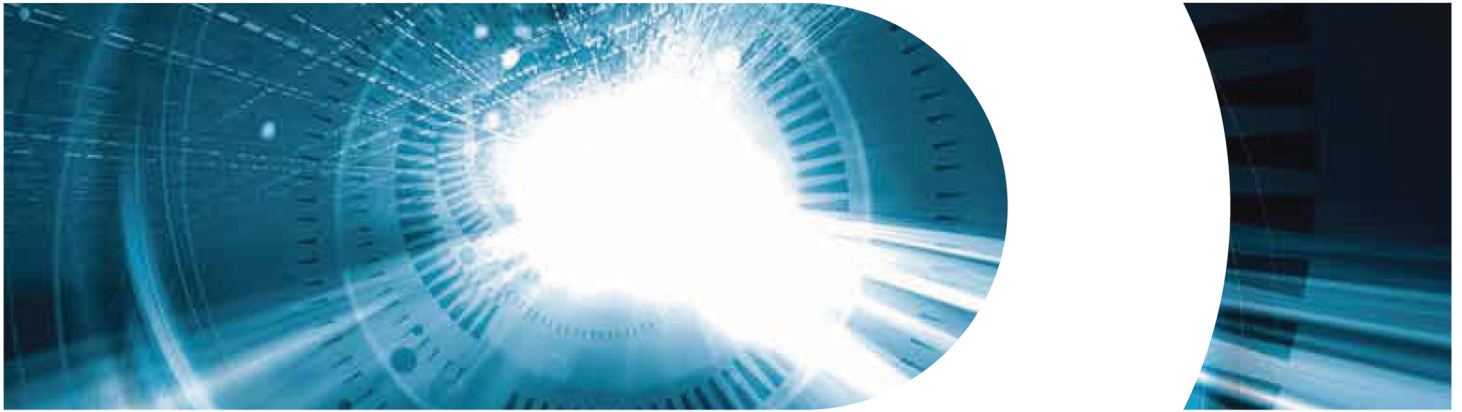

maximum TEC current is different from the maximum operating current. The maximum operating current, is the current at which a TEC can operate at, for an unlimited time through the lifetime of the module. The EOL TEC Operating Current should not exceed 70 % of absolute maximum current. The maximum operating current is specified for each series of pump modules.

- Make sure that all 14-pin butterfly package leads have electrical contact to avoid controller/power supply open circuits.
- Ensure the TEC leads are connected to the proper electrical polarity, and ensure that the TEC power supply is turned off prior to mounting or un-mounting the pump module.
- Operate the TEC in constant temperature mode with a temperature feedback from the LD chip thermistor. The thermistor leads have to be electrically contacted when the pump module is operating in order to prevent the temperature controller / power supply loop from opening. An opened loop TEC will run at its maximum available power supply current and can result in permanent module damage.
- Limit TEC power supply ripple factor to less than 10 %.
- Limit the TEC controller power supply to the absolute maximum TEC current rating.
- Do not operate the TEC at its rated maximum current except as transient applied current during module start-up.
- Limit the TEC operating current to about 70 % of the specified TEC maximum current.
- Wait until the internal temperature has stabilized to  $25 \pm 2$  °C after turning the LD on before making any TEC control changes.
- For a reliable pump module operation, make sure that the LD chip temperature is maintained at  $25 \pm 2$  °C.

## Eye safety recommendation

This product is a high power semiconductor laser (according to the class defined on the product specification sheet) and precautions must be taken to avoid eye damage or skin burns.

The use of optical instrument with this product will increase eye hazard.

Take appropriate precautions to prevent undue exposure of naked eye, as the beam emitted from the laser diode is harmful to human eye

Avoid any possibility of looking into the laser package or the collimated beam along its optical axis when the device is operating. Try to limit fiber movement.

Do not operate the pump module if the fiber end is not cleaved with a  $8^\circ$  angle.



---

## CONTACT INFORMATION

Europe & Asia: +33 169 805 833  
North America: +1 514 748 4848  
+1 888 922 1044

[sales@3spgroup.com](mailto:sales@3spgroup.com)  
[www.3spgroup.com](http://www.3spgroup.com)

---

## IMPORTANT NOTICE

Information in this document is typical and must be specifically confirmed in writing by your supplier before it becomes applicable to any order or contract.

Information is subject to change without notice.

---

## NOTES



# 3SPTechnologies

Source of Smart Solutions

